

The Nantucket Collection

by Lloyd Flanders® Dimensions - Care & Maintenance



Dining Chair 33" H x 31.5"W x 27.5"D Arm Height: 25.5" H



Lounge Chair 34" H x 36.5"W x 35.5"D Arm Height: 25" H



Chair & Half 34" H x 46" W x 35"D Arm Height: 25" H



Rocker 31.5" H x 37" W x 39"D Arm Height: 25" H



Ottoman 18.5" H x 35.5" W x 22.5"D



Large Ottoman 18.5" H x 44.5" W x 22.5"D



Porch Rocker 39.5" H x 26" W x 31"D Arm Height: 25"H



Swivel Glider 35" H x 37" W x 35"D Arm Height: 25"H



Glider Love Seat 34" H x 61" W x 35.5"D Arm Height: 25.5"H




Love Seat 34" H x 61" W x 35.5"D Arm Height: 25.5"H



Sofa 34" H x 85" W x 35.5"D Arm Height: 25" H

Available in 20 Custom Finishes

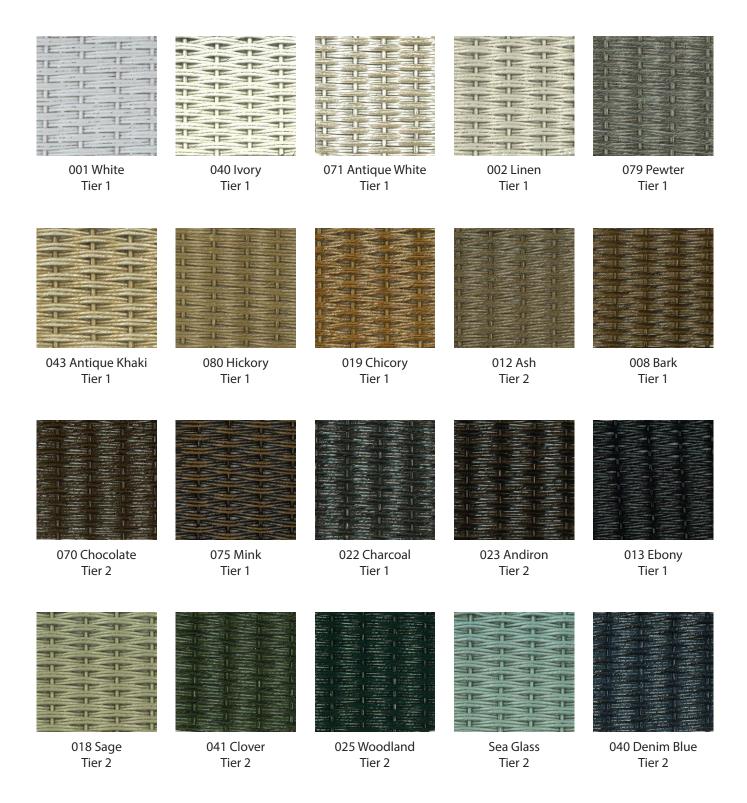

Caring For Lloyd Loom® Casual Furniture

Lloyd Flanders® All Weather Wicker will remain beautiful with minimal care and maintenance.

Regularly, vacuum the wicker and cushions with a soft brush or upholstery tool to remove organic material and surface soil. If they do become soiled, both the frame and the wicker can be washed with a mild detergent and water. Please use a wet sponge or soft brush to clean the soil from the surface. Rinse with clear water and dry thoroughly before use.

As with any fine outdoor furniture, timely care of the paint finish is necessary to protect the furniture from the elements and preserve its strength an beauty. If the wicker finish becomes worn, carefully clean and dry the affected area. Repaint with Lloyd Flanders® touch-up paint. Allow to dry thoroughly before use.

If the finish on the frame becomes scratched or chipped, first, lightly sand the problem area with fine grit sandpaper. Clean and dry the area, then use Lloyd Flanders touch-up paint.

Caring For Lloyd Flanders® Cloud Cushioning

Cushions upholstered in Sunbrella® or other solution dyed acrylic fabrics may be cleaned with one cup of chlorine bleach diluted in one gallon of water with a small amount of mild detergent. Test in a small inconspicuous area. Saturate a cloth or soft brush with the solution. Scrub the entire cushion and rinse well with clean water and let air dry.

Printed acrylic fabric may be scrubbed with a solution of mild detergent and warm water. Do not use bleach. Rinse and air dry. Do Not Put In Dryer Or Send Out To Dry Cleaners.

If excessive waters accumulates in the cushion, stand upright with the open zipper or seam side down. The cushion should dry quickly as this facilitates the draining of the water through the fibers.