




POLYWOOD

Assembly Instructions



Having Trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at **(833) 665-6300** or email support@polywoodoutdoor.com

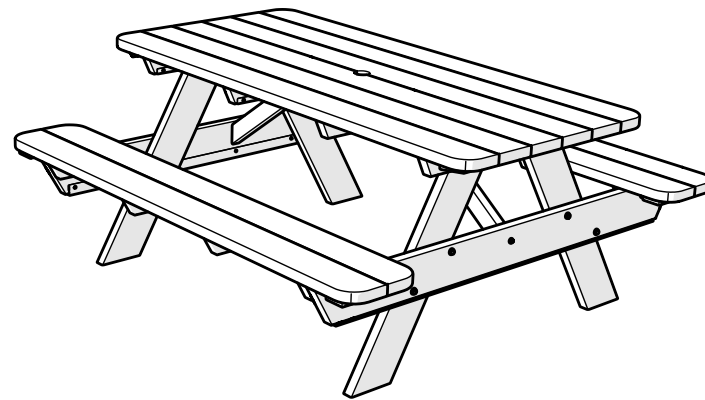

20-Year Warranty


To view our full warranty, please visit polywoodoutdoor.com/warranty

Easily register your product using one of the methods below:



Share your space

We love to see where our furniture ends up — snap a pic and share it on Instagram or Facebook!
#polywood

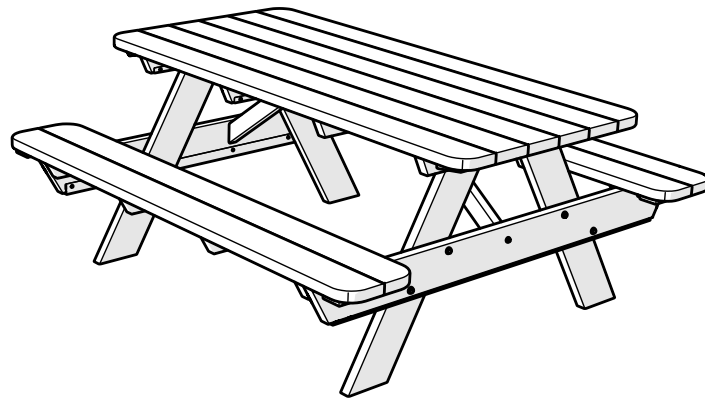

Text POLYWOOD to 71403
Receive a link to register online

— or —

Register on our website
register.polywoodoutdoor.com

— or —

Send a Picture
Take a photo of the icon below and text it to 71403 (US only)

Cleaning Tips

Even POLYWOOD gets dirty — here are some ways to help keep it clean:

For a quick clean:

Simply wipe down with soap and water.

For a deeper clean:

You'll need:

- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush


Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.



Watch & Learn

For assembly videos and more, visit youtube.com/polywood


PT172, PT172NH Park 72" Picnic Table

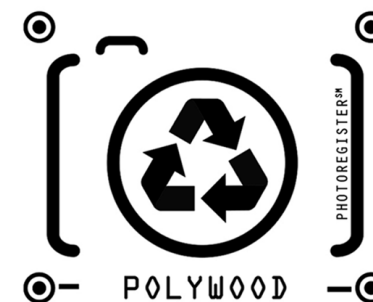

TOOLS




 7/16" wrench
(not included)




1/2" wrench
(not included)

PARTS

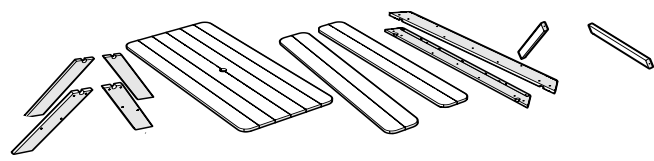


A x 24

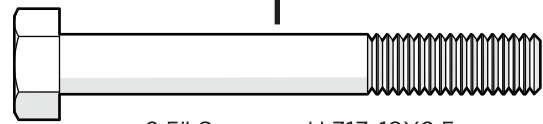

2.5" Screw — H.313-18X2.5

 B x 4



3" Screw — HHL.25X3

O x 24

5/16 X 3/4 OD FLAT WASHER

O x 4


1/4 FLAT WASHER

Something missing?
Call (833) 665-6300

1

O x 4

5/16 X 3/4 OD FLAT WASHER

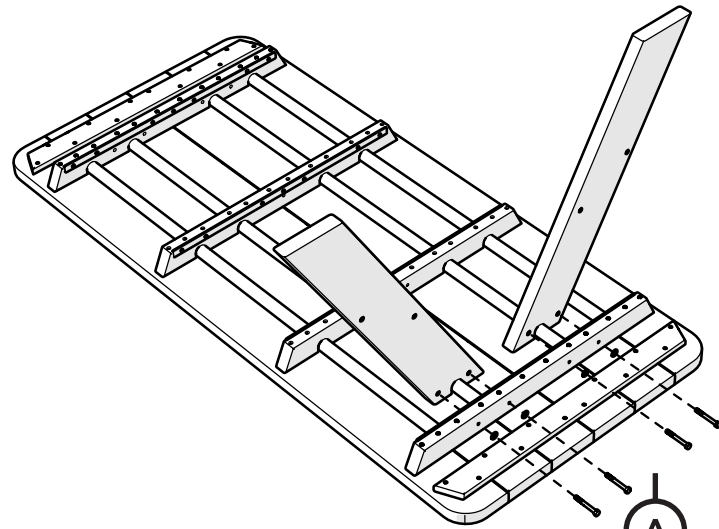


Repeat other side

2

O x 4

5/16 X 3/4 OD FLAT WASHER

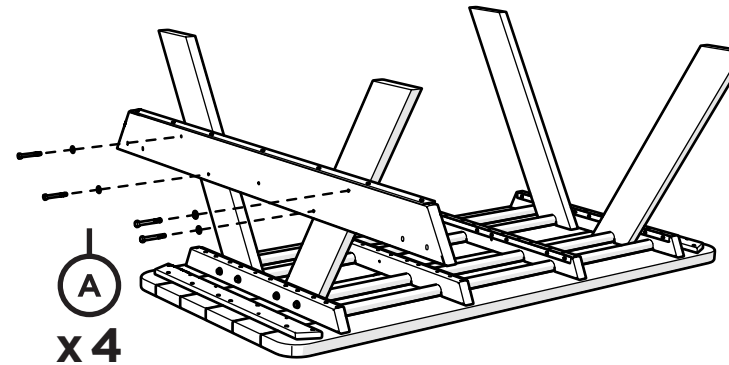


Repeat other side

3

O x 2


1/4 FLAT WASHER

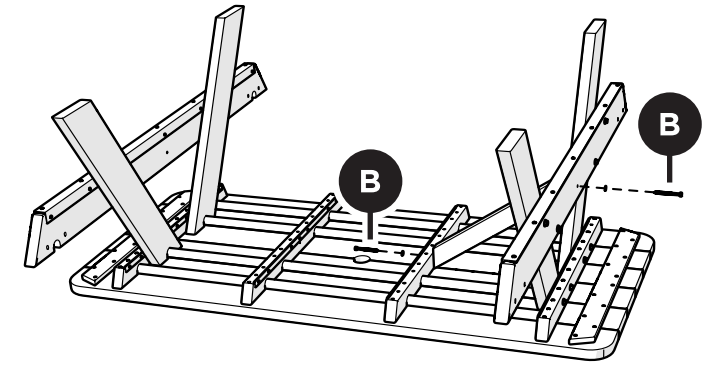

4

O x 2

1/4 FLAT WASHER

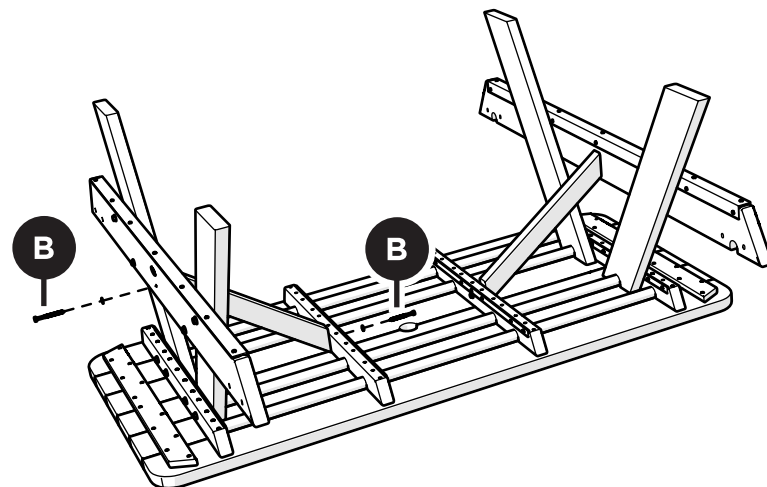


5

A x 2

A x 2

O x 4

5/16 X 3/4 OD FLAT WASHER

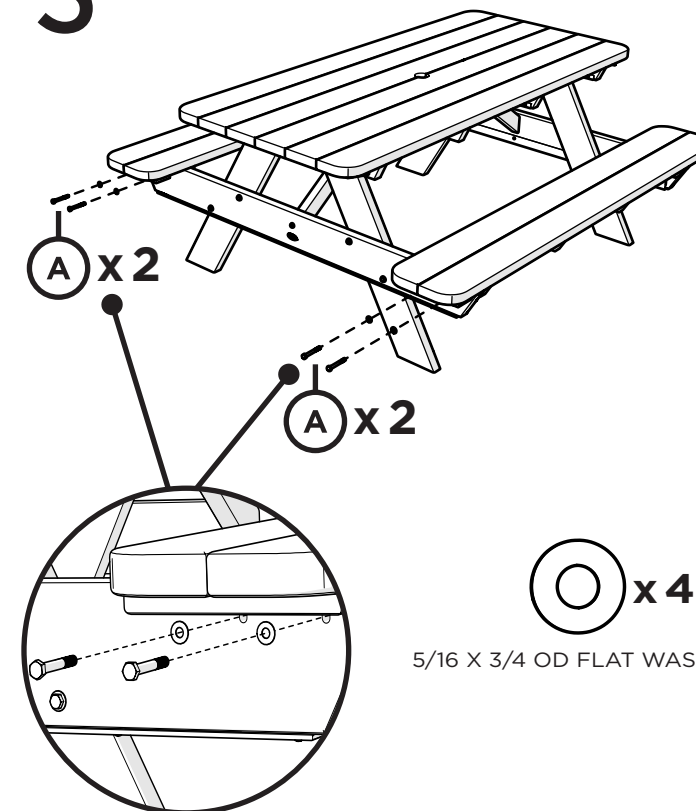

6

A x 2

O x 4

5/16 X 3/4 OD FLAT WASHER

