

Instructions for electrician STEPS 2 - 6

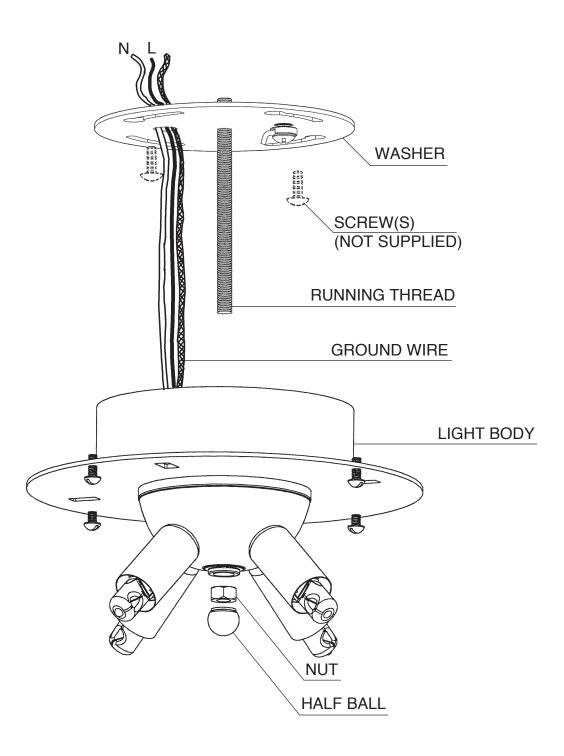

- 2 MAKE SURE POWER IS DISCONNECTED BEFORE INSTALLING OR MAINTAINING THIS FIXTURE.
- 3 Attach washer to ceiling with screws (not supplied).
- 4 Connect wires. Fixture MUST be grounded. If in any doubt consult a qualified electrician.
- 5 Slide light body over running thread and secure in place with nut and half ball.
- 6 Insert bulbs into sockets and test for proper wiring before hanging trim from fixture.

PLAZA 6692A TRIM DIAGRAM


THIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADEMARK OF SCHONBEK WORLDWIDE LIGHTING

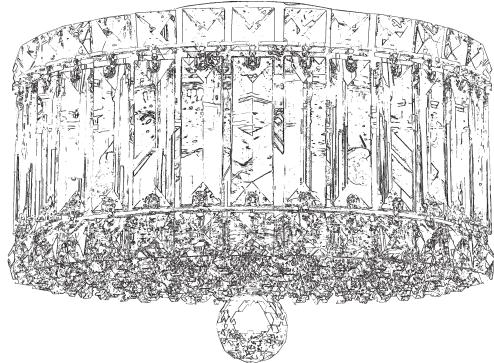

4 Lights Diameter: 10" Height: 7.5" Weight: 9lbs.




See diagram on back page Follow steps in exact order Save this trim diagram for future reference

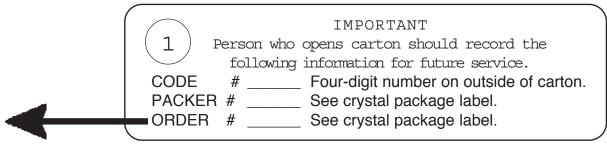

SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE: #5,144,541

Instructions for crystal trimming STEPS 7 - 10



4 - G9 JCD (Supplied - Schonbek #JCD-G9-40) 40 Watts Max Install bulbs and be sure to test fixture BEFORE assembly. MIN 75°C SUPPLY CONDUCTORS

To avoid damaging, do NOT touch bulb with bare hands. Install bulb with clean cloth or tissue.

7 Place slots in top plate over screws on the light body. Turn fixture slightly until it is securely in place. Tighten the (4) screws to lock the top plate in place.

8 Install bottom crystal grid with thumb nuts (already screwed onto grid) to bottom of ring #1.

9 Screw ball "B" onto bottom of grid. Tighten set screw to lock into position. (Diagram #1)

10 Hang chain "A" into top plate. Hold chain by the top square crystal. (NOTE: Flat side of large crystals face out and chains are also symmetrical so either end will work!) Insert square crystal into the pocket of the ring. (Diagram #2) Lower the chain until the top square stone seats itself into the ring pocket.

