

If installing on stud, skip steps 13-14 and proceed to step 15.


If installing on drywall, proceed to step 13

13. Remove the shelf and start drilling holes on your marks using a 5/16" drill bit




14. Insert the drywall anchors (D). Make sure the tabs are vertical. Inserting the anchors may require a mallet


- i. Fold anchor in the middle

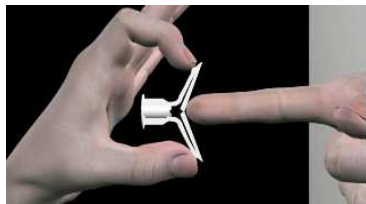

- ii. Insert anchor in the hole

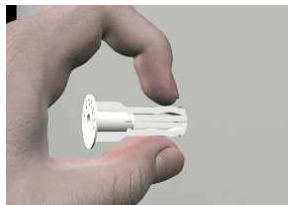


- iii. Tab flush with a hammer

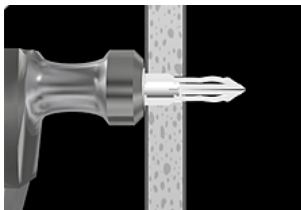

15. Hold the shelf back in place and have a friend insert the final drywall anchor screws (E) (through the L-bracket and through the hole at the bottom of hairpin Adams Shelf Support).



## **Tronk Adams Shelf Support** **Installation Instructions**

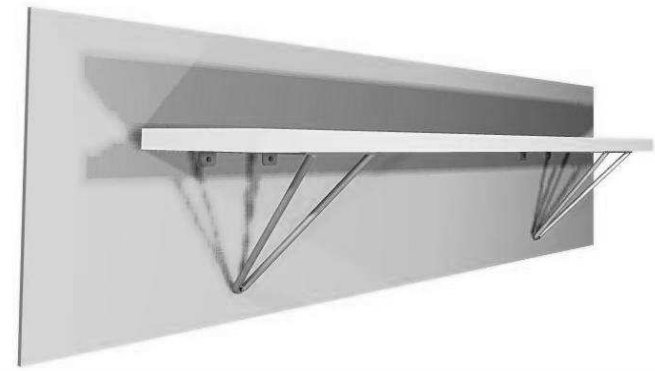

### **The box includes:**


- A. 2 Adams Shelf Supports
- B. 2 L-brackets
- C. 8 5/8" screws
- D. 4 drywall anchors
- E. 4 drywall anchor screws

### **Things you'll need:**

- Hand drill
- Mallet or hammer
- Screw driver
- 3/32" drill bit
- 5/16" drill bit
- Pen
- A friend (optional)



B



C




D




E

1. Find a suitable wall location for your shelf. We recommend installing directly into a stud. However, dry wall anchors are provided for light duty use if installed on dry wall
2. Cut your shelf to length
3. Determine how far from each end of your shelf you would like to place the Adams Shelf Supports
4. With the shelf upside down lying on the ground, make a pencil mark on each end of the shelf that will represent the center line of the Adams Shelf Support

5. Place the installation template sheet on the bottom of your shelf aligning the mark you just made with the center line of the template sheet

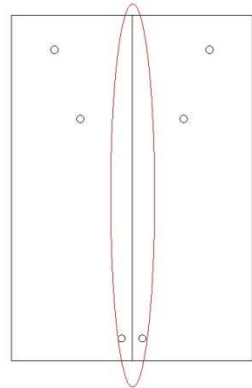


6. Next, align the bottom line of the template with the edge of your shelf that will be against the wall

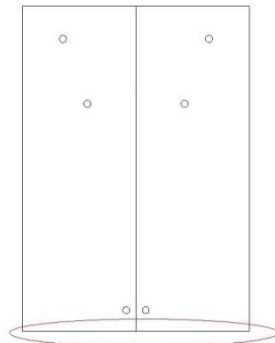

7. The template shows holes for both the 7.5" support and the 9.5" support. Determine which set is appropriate for your shelf support size. You only need 1 set of holes

For Small (7.5") size  
Adams Shelf Supports

For Large (9.5") size  
Adams Shelf Supports

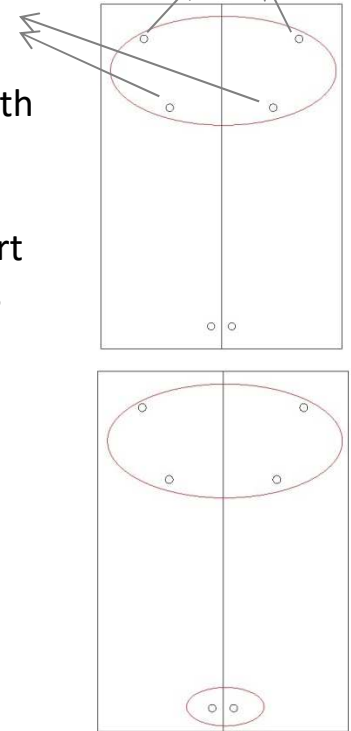

8. Using a pen, push through the centers of the template holes so that you make a mark on the bottom of your shelf

9. Remove the template and drill holes on your pen marks approximately 1/2" deep, using a 3/32" drill bit

10. Mount the supports and the L-brackets (B) using the 5/8" screws (C) provided

11. Place your shelf where you would like it on the wall and level it

12. Once the shelf is level have a friend use a pen and mark where the drywall anchors /screws will be inserted.

