




Component List



A - x 1



B - x 1




C - 50mm
x4



D - 37mm
x 8




E - x 4




F - x 4




G - x 1

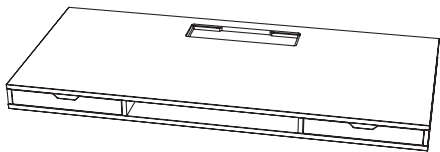


H - x 1




I - x 1

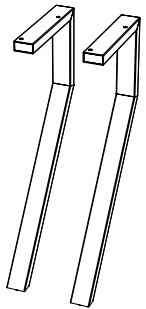

J - x 2

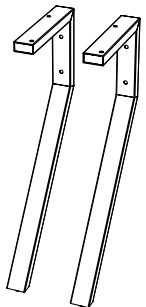

K - x 2




L - x 2

Placement and Maintenance




Modica™ Office furniture is designed for indoor use on level floors. Clean steel parts and wood veneer with a moist cloth.

Unpack and Identify

Unpack and identify the components at left. Note that some components are shipped inside the drawer assembly. The assembly workspace should be a non-marring surface such as carpet. For missing hardware pieces, please contact BDI Customer Service at customerservice@bdiusa.com. For all other concerns, please contact your BDI Retailer.


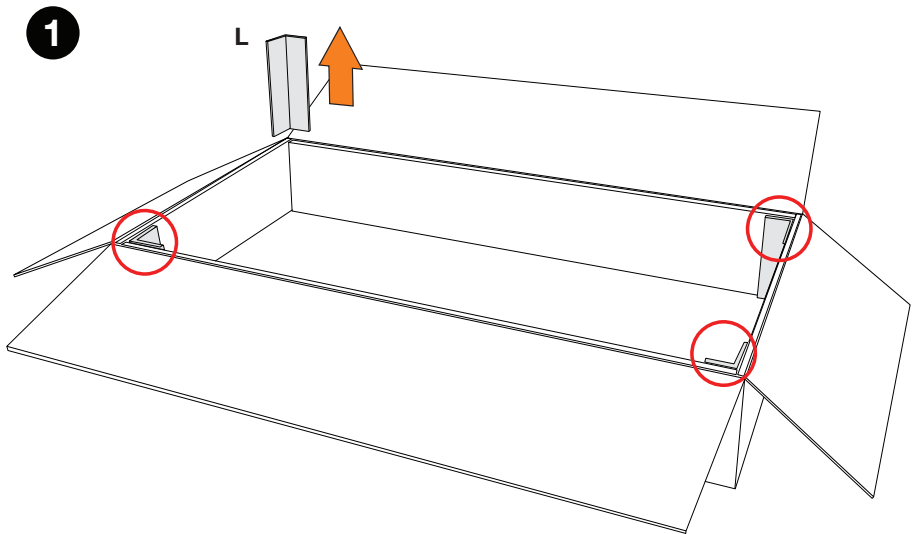


2

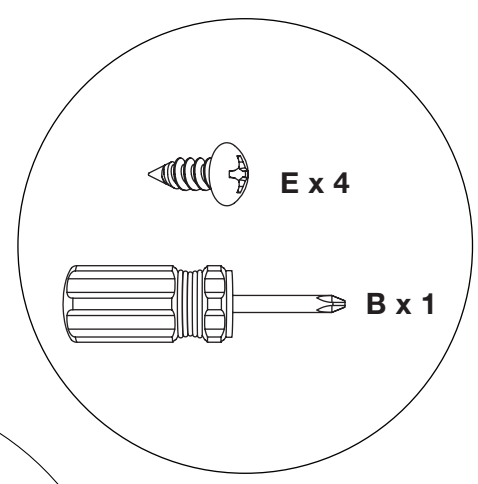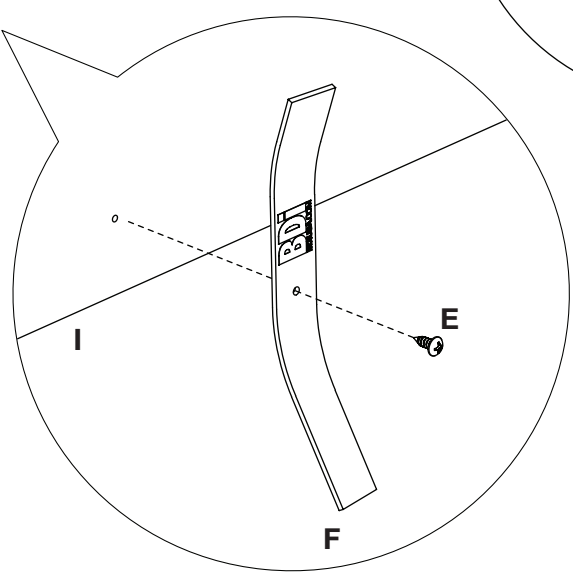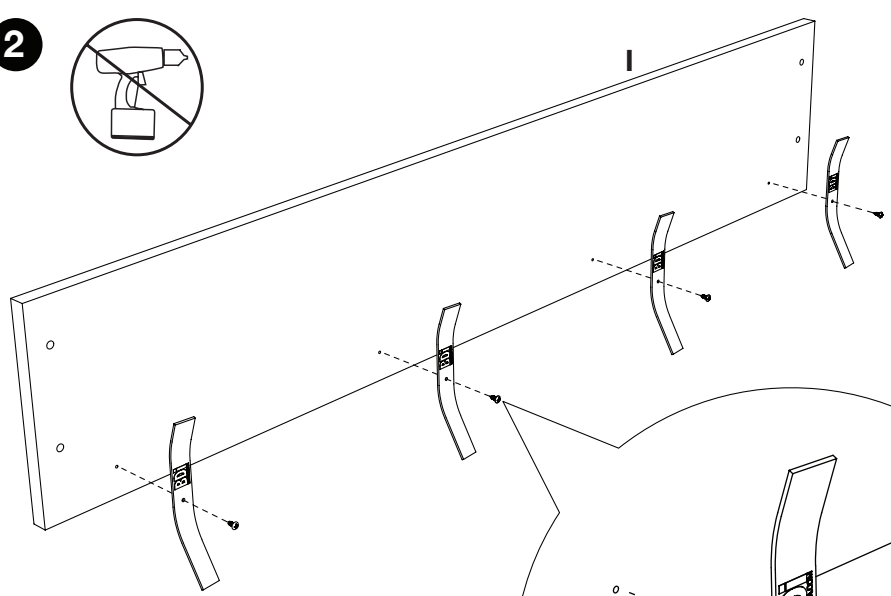


3

Loosely attach screws.

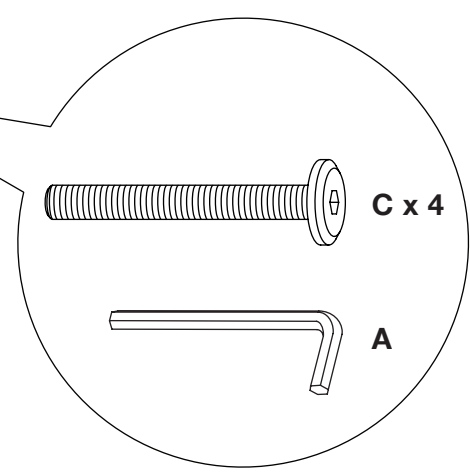
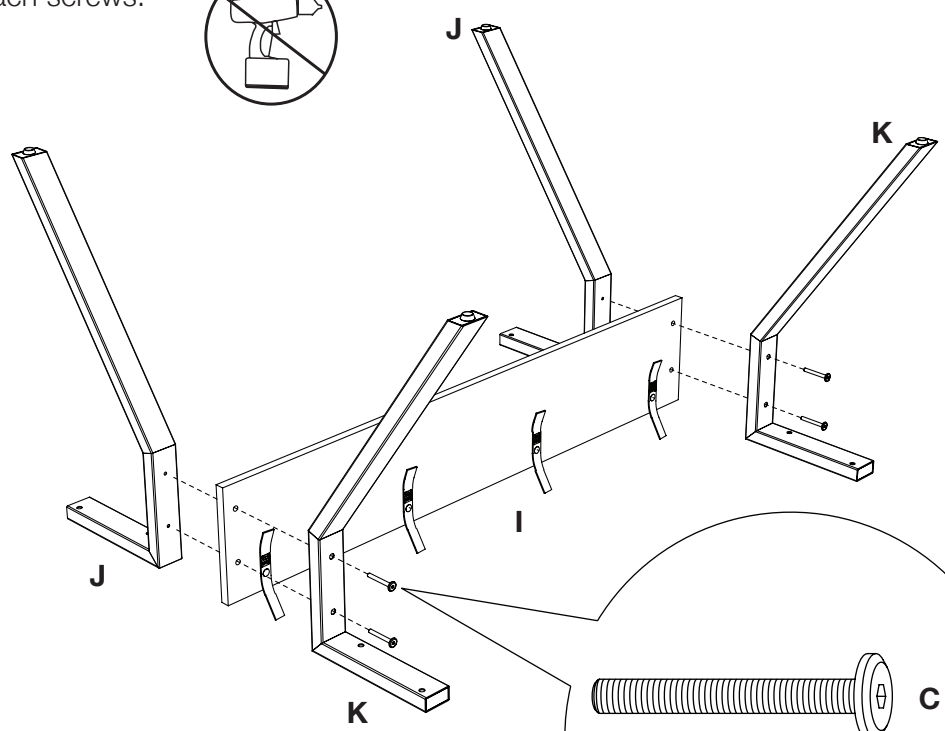


- 4** Fully tighten all screws at this point.

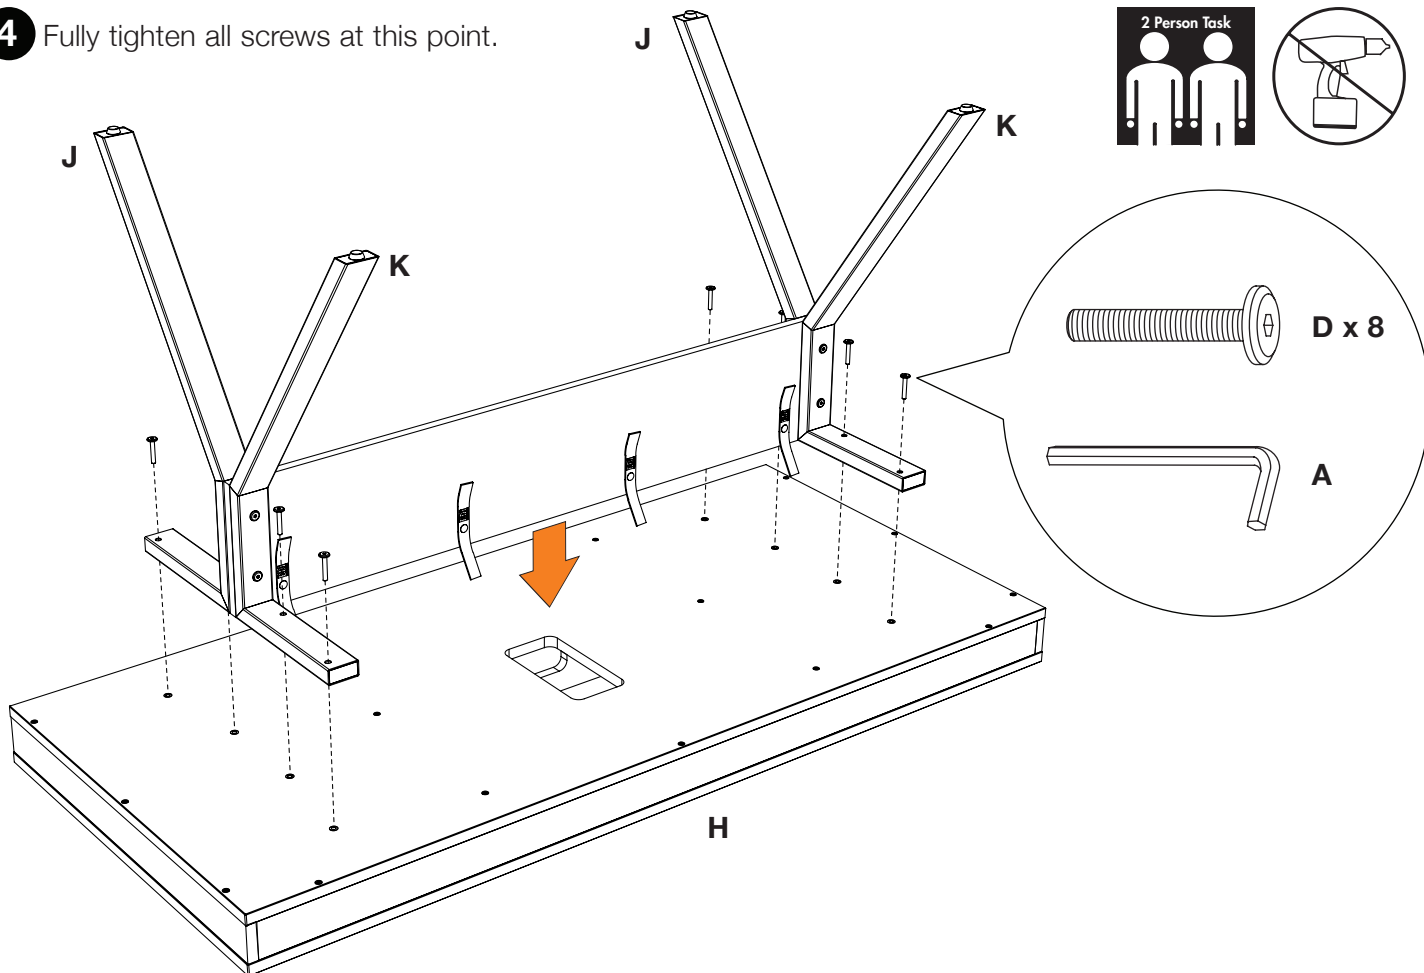

- 5 CAUTION: FOLLOW THIS STEP CAREFULLY TO AVOID DAMAGE TO YOUR FLOOR.**

Place the **Cardboard Corner Protectors (L)** from packaging underneath the **Legs (K)**. With the help of another person, carefully tip desk upright onto **Legs (K)**. Slide **Cardboard Corner Protectors (L)** from underneath **Legs (K)**.

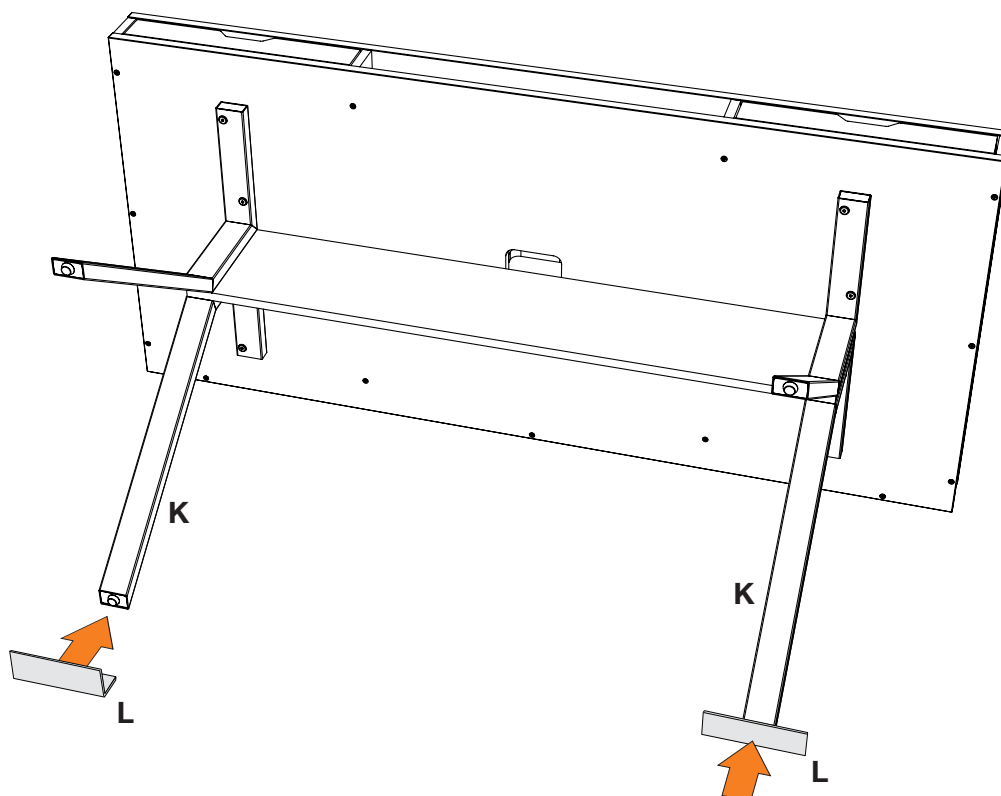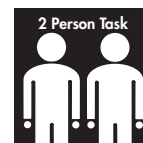

6

NOTE: Power Strip not included.

