



ASSEMBLY INSTRUCTIONS FOR (QGL1SCD-05-)

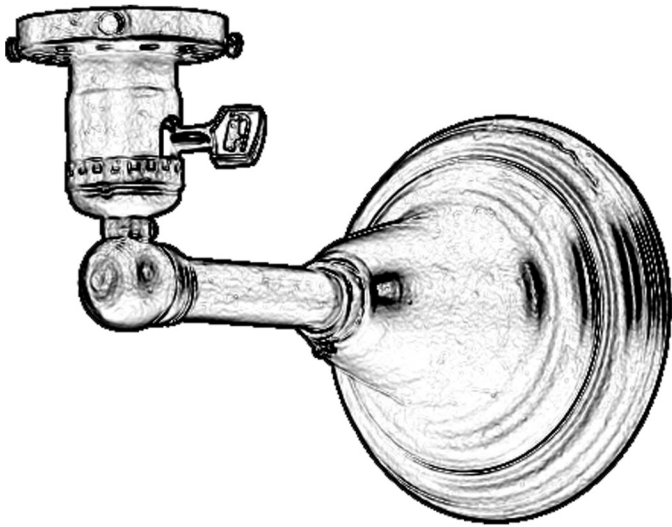


QGL1SCD-05-

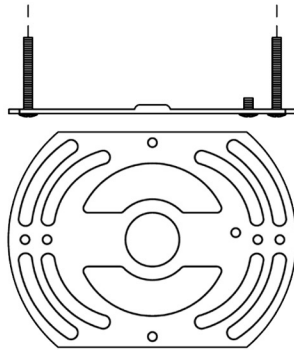

4.5" WIDE
PADDLE SOCKET
WALL SCNCE
WITH 2.25" FITTER

ATTACH GLASS SHADE
INTO FITTER
WITH 3 THUMBSCREWS
PROVIDED

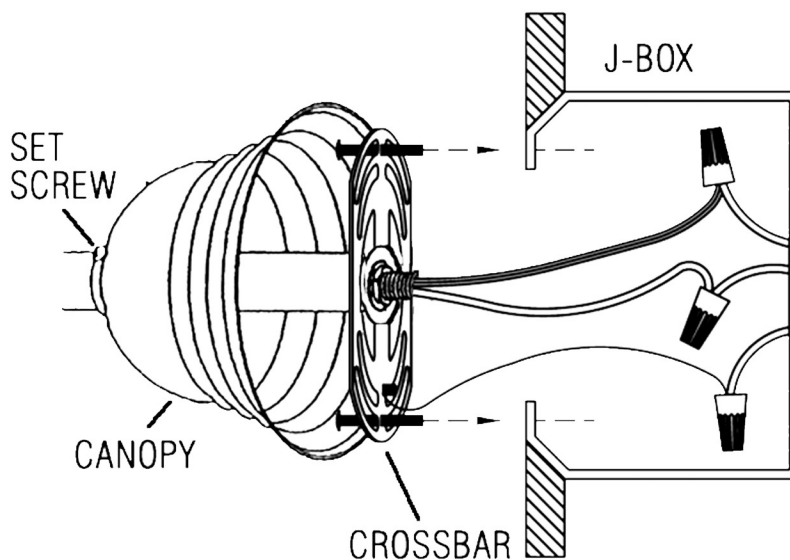

IMPORTANT

TURN OFF THE POWER AT THE
MAIN FUSE OR CIRCUIT BREAKER
BOX BEFORE
STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL
PARTS BEFORE ASSEMBLY. BULBS ARE
NOT INCLUDED

1. Loosen set screw and slide canopy as far up tube/neck as possible.
2. Attach crossbar to J-BOX using screws provided.
3. Wire sconce to J-BOX per local electrical code.
4. Slide canopy back down tube/neck over crossbar tightly against wall. Secure by tightening set screw.
5. Turn power on to J-Box



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com