

ASSEMBLY INSTRUCTIONS FOR #106019 (58167-1)

Fig. C


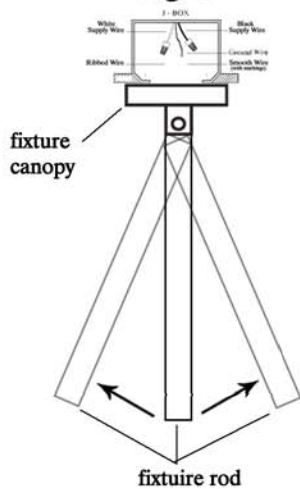


Fig. B

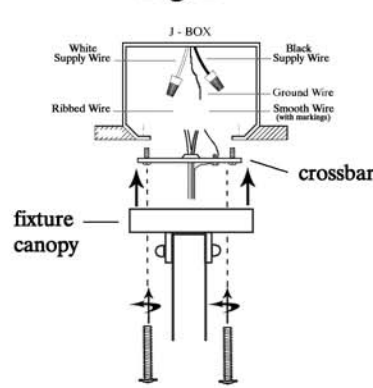

IMPORTANT


TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Place electrical wires up through fixture rod & canopy. Make sure to leave a minimum of 6" of fixture wire exposed from top of canopy. Fig.A
2. Screw canopy screw through canopy and fixture rod, tighten with cap nut. Screw fixture screw through light bar and bottom of fixture rod, tighten with cap nut. Be careful not to pinch fixture wires with canopy & fixture screw. Fig.A
3. Screw thumb screws into top light bar as shown in Fig.A
4. Screw crossbar into j-box, wire as per local electrical code. Fig.B
5. Screw fixture/canopy into crossbar and tighten to ceiling. Fig.B
6. Place shade up and onto uno socket, screw uno ring onto uno socket and tighten to shade. Repeat for remaining shades. Fig.A

This fixture comes with a swivel canopy and can be mounted to any slanted ceiling as shown in Fig.C

Fig.A

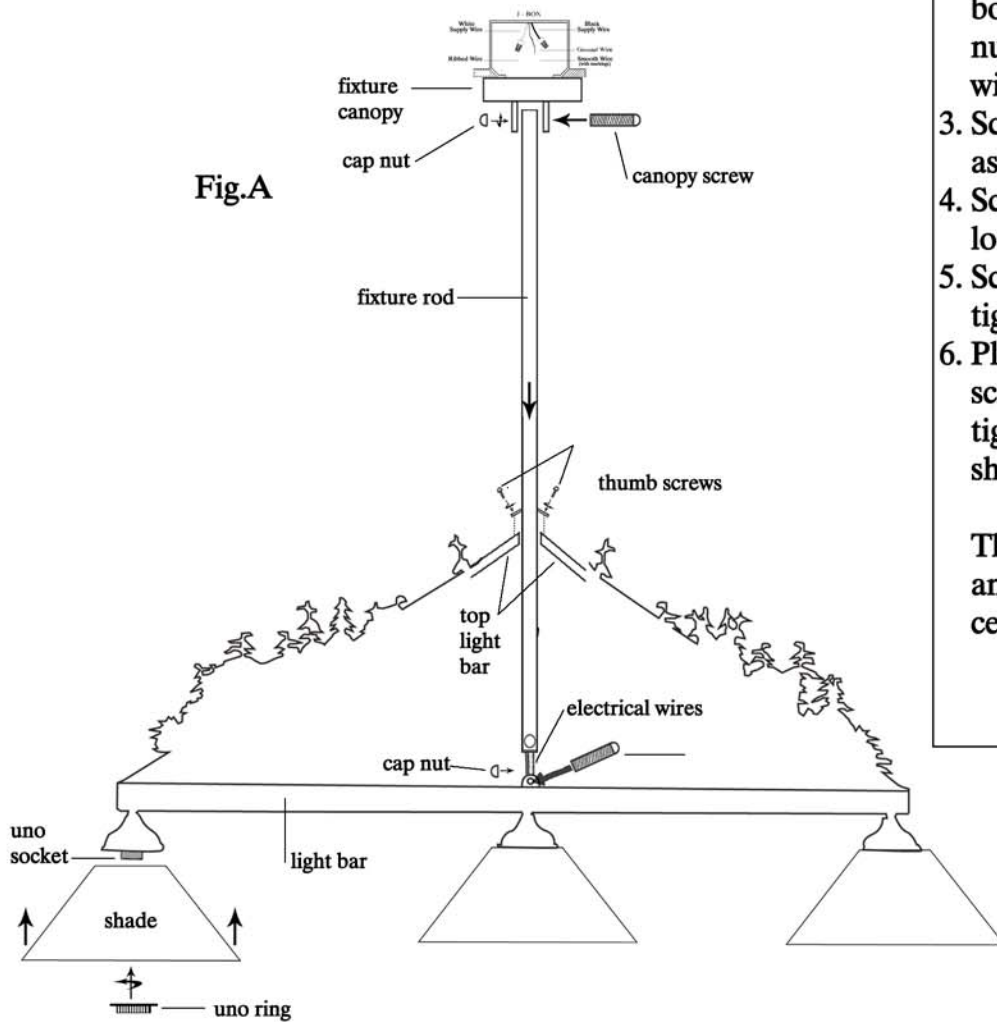

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com