


ASSEMBLY INSTRUCTIONS FOR #110734 (SG676-24-1-M359CFL)

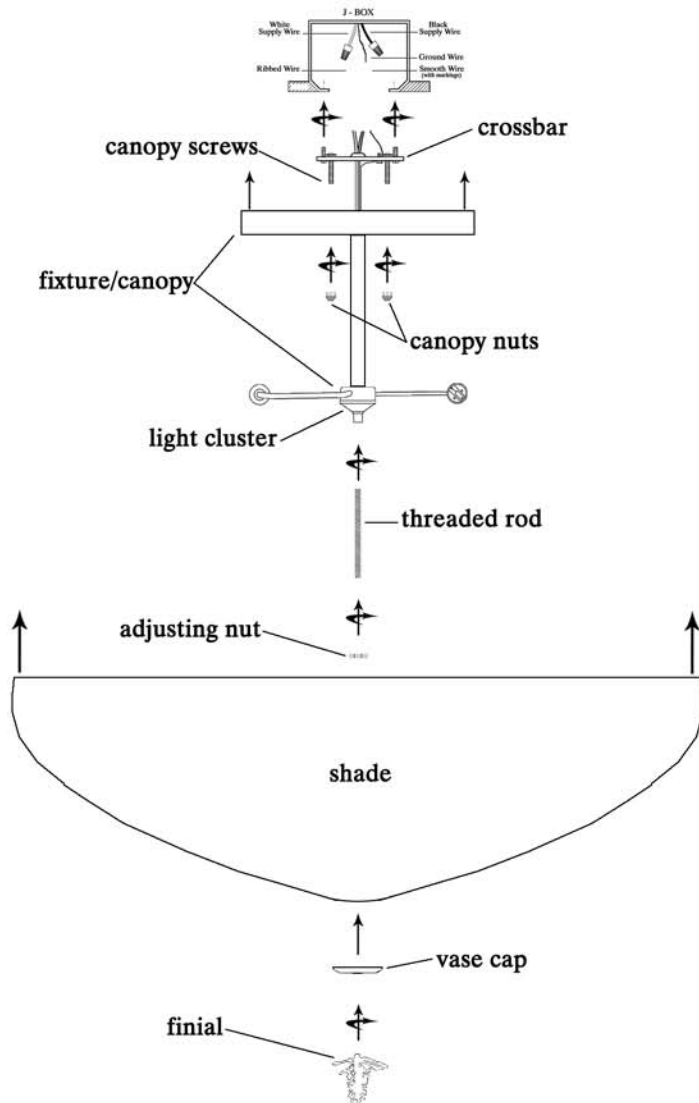

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Attach crossbar to j box.
2. Wire as per local electrical code.
3. Place fixture/canopy onto canopy screws, screw canopy nuts onto canopy screws and tighten to ceiling.
4. Screw threaded rod into bottom of light cluster, screw adjusting nut onto threaded rod approximately 1".
5. Place shade onto threaded rod, place vase cap threaded rod and onto shade, screw finial onto threaded rod and tighten to shade.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com