

ASSEMBLY INSTRUCTIONS FOR #120614

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1) ATTACH CROSS BAR (A) TO JUNCTION BOX WITH FASTENERS (B) PROVIDED BY OTHERS.

2) MEASURE LENGTH REQUIRED FOR LAMP CORD (C) TO HANG AT DESIRED HEIGHT. KEEP ADDITIONAL MINIMUM 6" ADDITIONAL LENGTH FOR WIRING CONNECTION TO "J" BOX. CUT TO LENGTH.

3) INSERT LAMP CORD (C) THROUGH CENTER OF CANOPY (D), ADJUST LAMP CORD TO DESIRED HEIGHT.


4) CRIMP IN PLACE METAL STRAIN RELIF (E) ABOVE CANOPY.

6) WIRE AS PER LOCAL ELECTRICAL CODES.

7) SLIDE CANOPY (D) TO CEILING AND SECURE IN PLACE WITH BALL CAP (F).

CAUTION:

ANY ELECTRICAL FIXTURE SHOULD BE INSTALLED BY A CERTIFIED ELECTRICIAN.

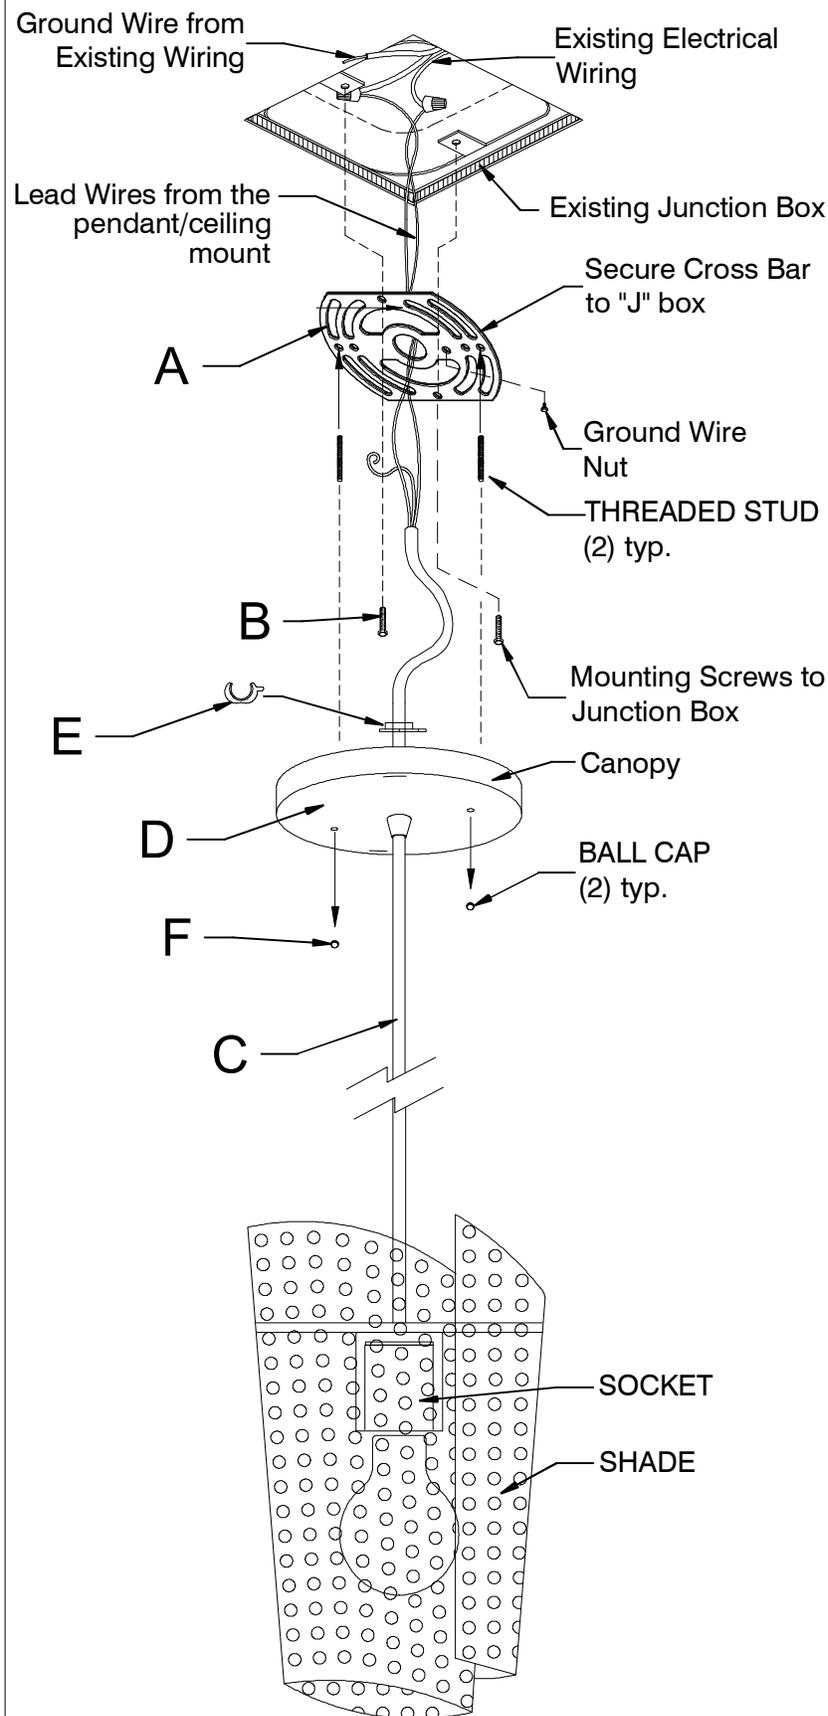

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-843-1602

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at www.2ndave.com