


# ASSEMBLY INSTRUCTIONS FOR #125515 (59735-71) DF-1

**THIS IS A TWO PERSON JOB!**

## IMPORTANT

**TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION**

**CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED**

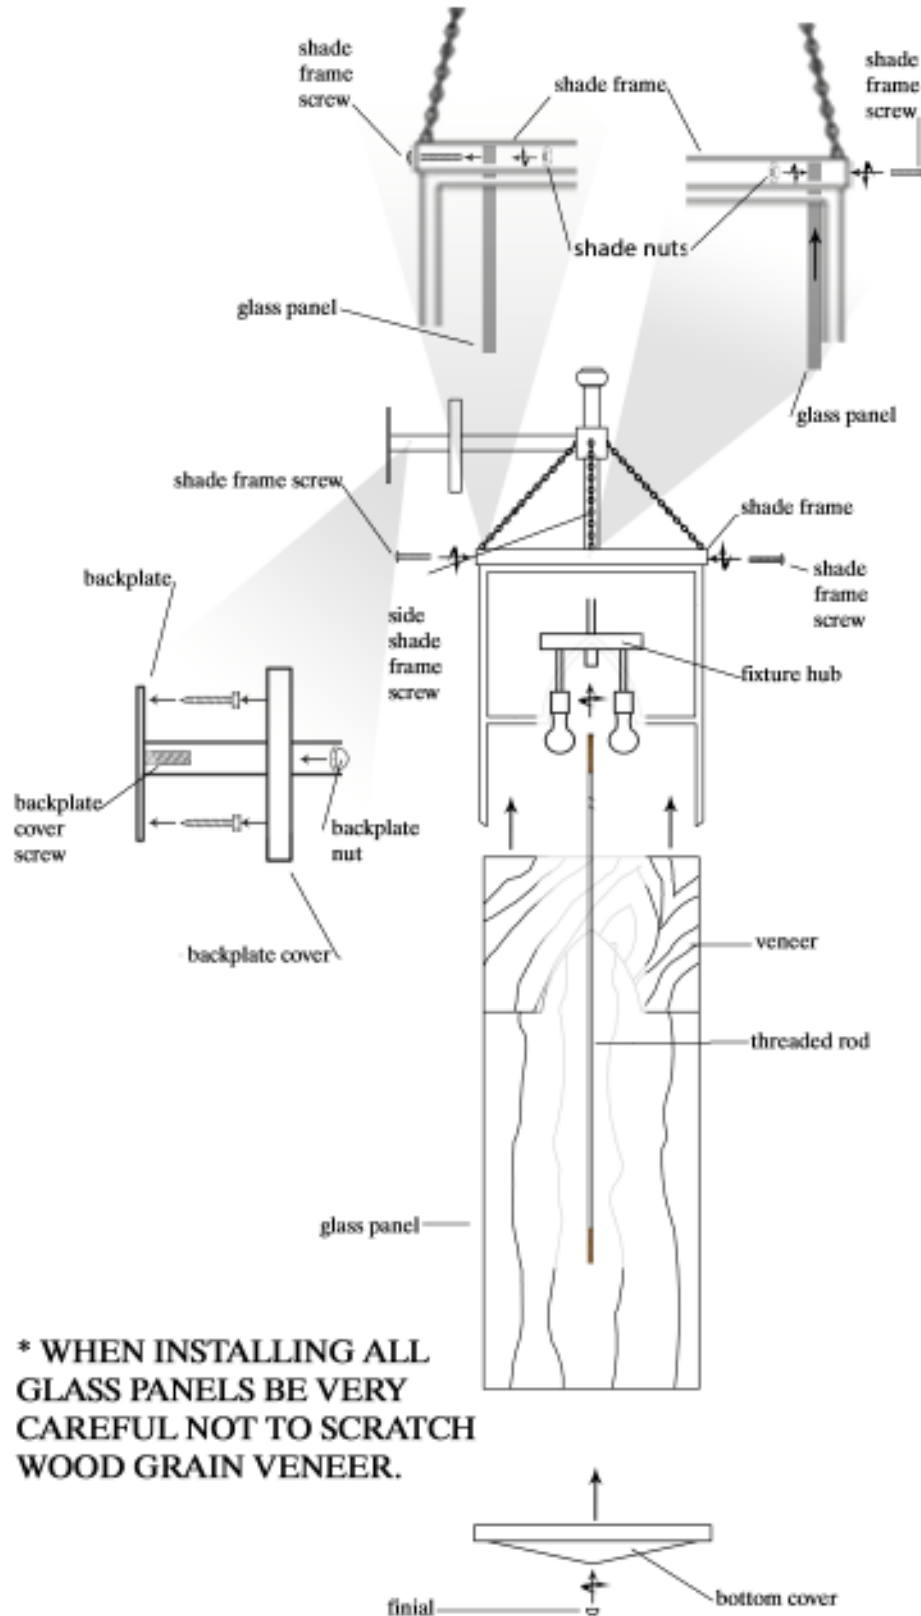

**\* WHEN INSTALLING ALL GLASS PANELS BE VERY CAREFUL NOT TO SCRATCH WOOD GRAIN VENEER.**

1. Wire as per local electrical code.
2. Attach backplate/fixture to secure location. Slide backplate cover back and over backplate onto backplate cover screws, secure with backplate nuts. FIG.A
3. Screw threaded rod into bottom of fixture hub.
4. Remove side shade frame screws.
5. Gently place marked, rear glass panel onto rear shade frame screw, secure with locktight and shade nut.
6. Repeat step 4 with front glass panel.
7. Install side panels. Hold panel in vertical position, gently slide panel up into shade frame.

**\*(BE VERY CAREFUL NOT TO MOVE GLASS PANEL LEFT OR RIGHT WHEN PLACING INTO POSITION AS HITTING PREVIOUSLY INSTALLED GLASS PANELS MAY CAUSE PANELS TO CRACK OR BREAK. BE SURE TO KEEP GLASS PANELS VERTICAL THROUGHOUT INSTALLATION).**

8. With glass panel in position, screw shade screw into shade frame and through hole located on top of glass panel.
9. Secure with locktight and shade nut.
10. Repeat steps 7-9 for remaining panel.
11. Place bottom cover up and onto threaded rod. CAREFUL PLACE SHADE PANELS INTO CHANNELS LOCATED ON INSIDE OF BOTTOM COVER).
12. Secure with finial. DO NOT OVERTIGHTEN

**NOTE: shade nuts, locktight and lampling must be completed through top of shade.**



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)