
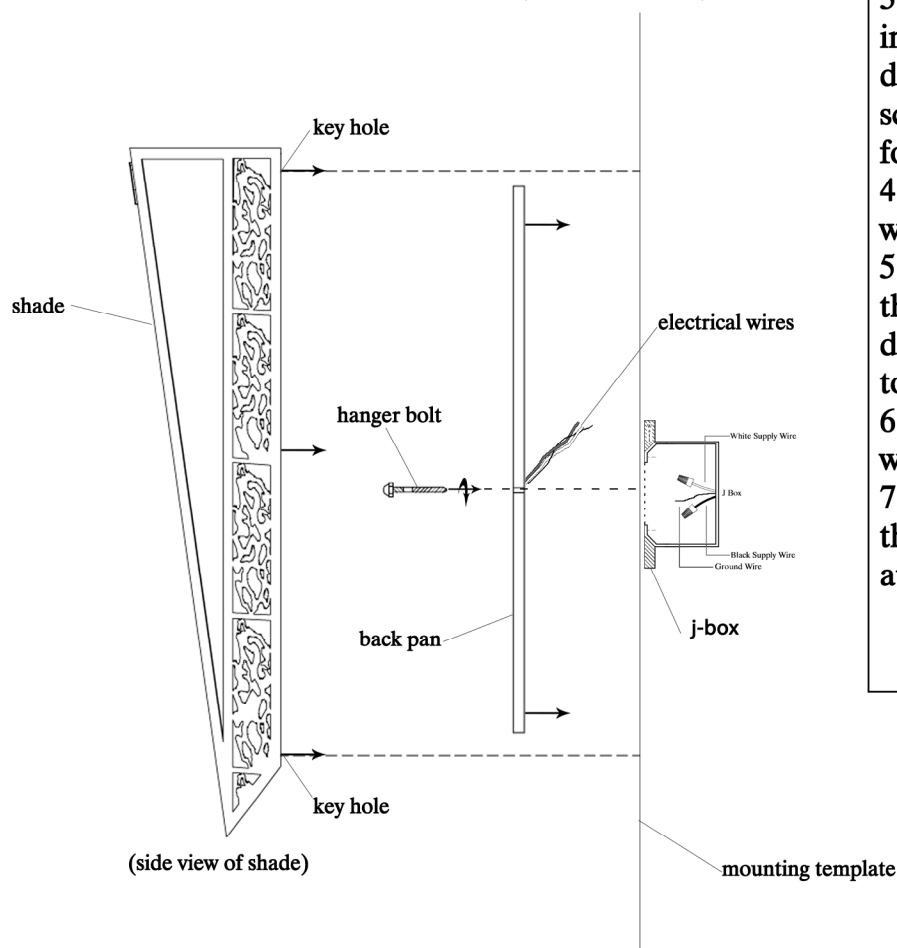


# ASSEMBLY INSTRUCTIONS FOR #136080 (202238-1)

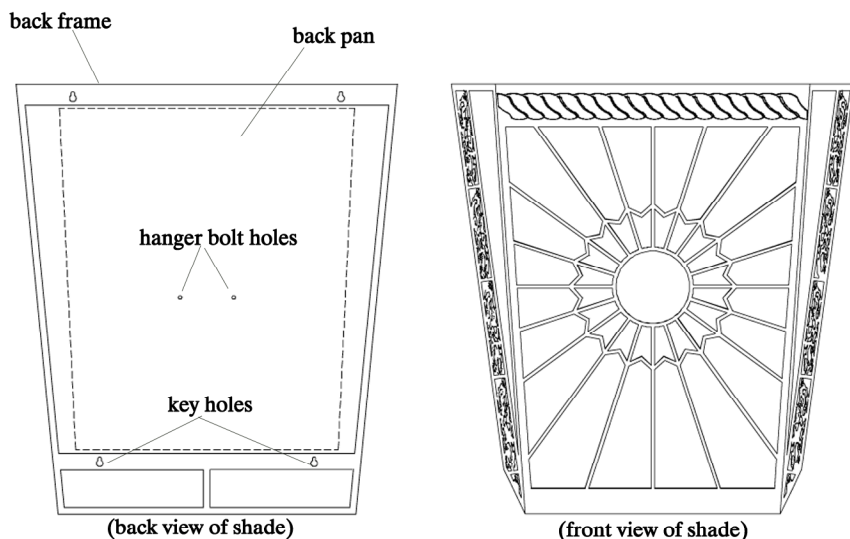

## IMPORTANT

**TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION**

**CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED**

- 1.) Determine where the sconce will be hanging on the wall and attach the mounting template.
- 2.) Drill 4 small holes using the full size layout on the mounting template to mark the locations where the key holes will attach. Also take note of where the back pan will be mounted.
- 3.) Remove the mounting template and insert 4 customer provided screws into the drilled holes. Leave about 3/4" of the screws sticking out of these holes in order for the key holes to attach.
- 4.) Hold the back pan up to the wall and wire as per local electrical code.
- 5.) Secure the back pan to the wall using the hanger bolts provided. If desired, drill additional holes through the back pan to attach more screws for mounting.
- 6.) Install light bulbs as per the labelled wattages on the back pan.
- 7.) Attach the shade to the wall by fitting the 4 key holes onto the 4 screws you attached prior to mounting the back pan.



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)