

ASSEMBLY INSTRUCTIONS FOR #138633

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1) ATTACH CROSS BAR (A) TO "J" BOX WITH FASTENERS (B) PROVIDED BY OTHERS.

2) THREAD CORD (E) UP THROUGH CENTER OF CANOPY (C) AND ADJUST TO DESIRED LENGTH BEFORE SECURING IN PLACE WITH STRAIN RELIEF (K).



3) WIRE AS PER LOCAL ELECTRICAL CODES.

4) SECURE CANOPY TO CEILING WITH CANOPY NUTS (D).

5) PLACE RING (G) TO BOTTOM SIDE OF SHADE (H) WITH FITTER SIDE UP TO SECURE TO SOCKET ASSEMBLY (F).

6) SCREW FASTENERS ON SOCKET ASSEMBLY (F) TO SECURE SHADE IN PLACE.

7) INSTALL LAMPING (BULBS). BULBS PROVIDED BY OTHERS.

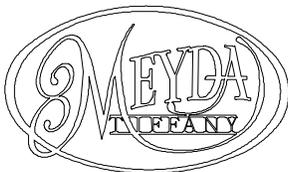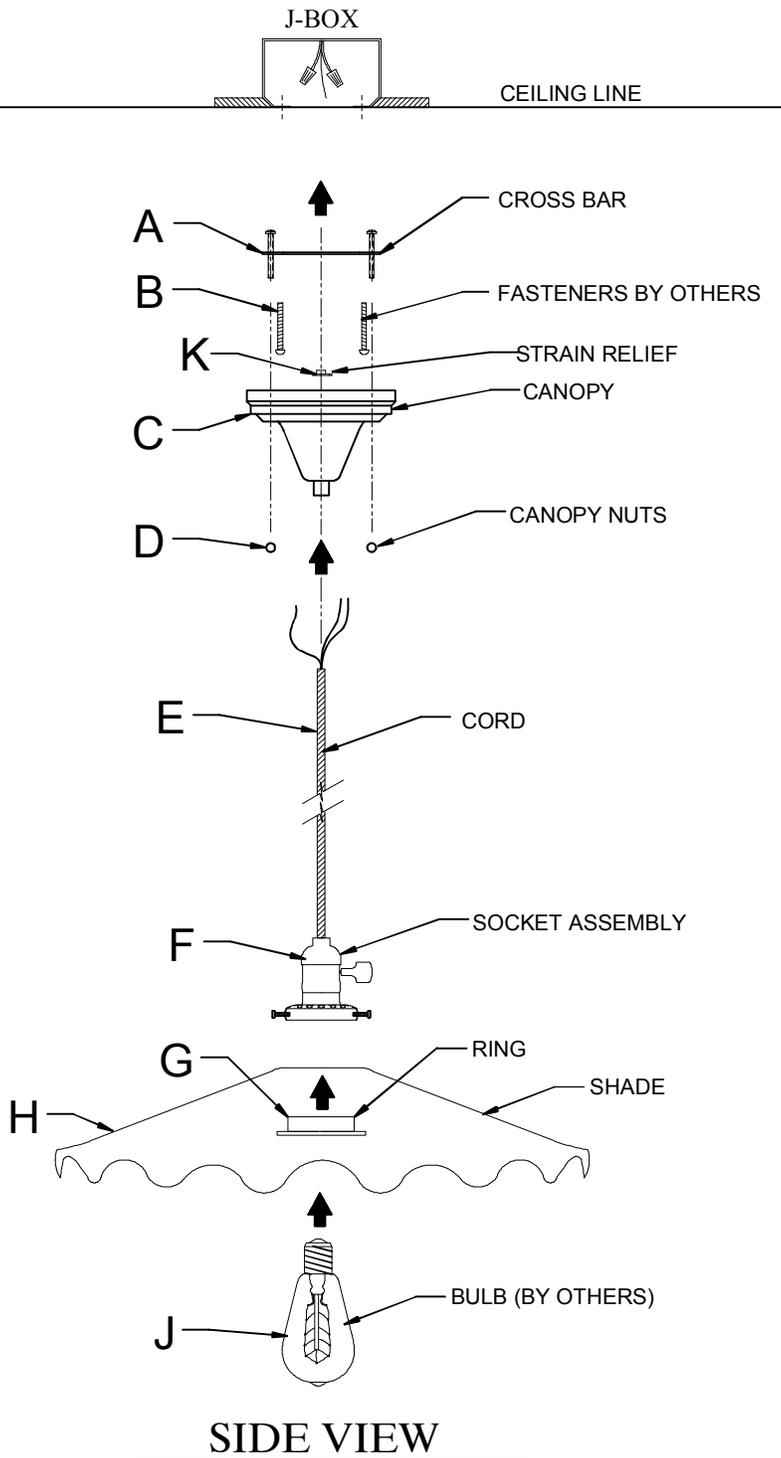

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at www.meyda.com