


ASSEMBLY INSTRUCTIONS FOR #145995

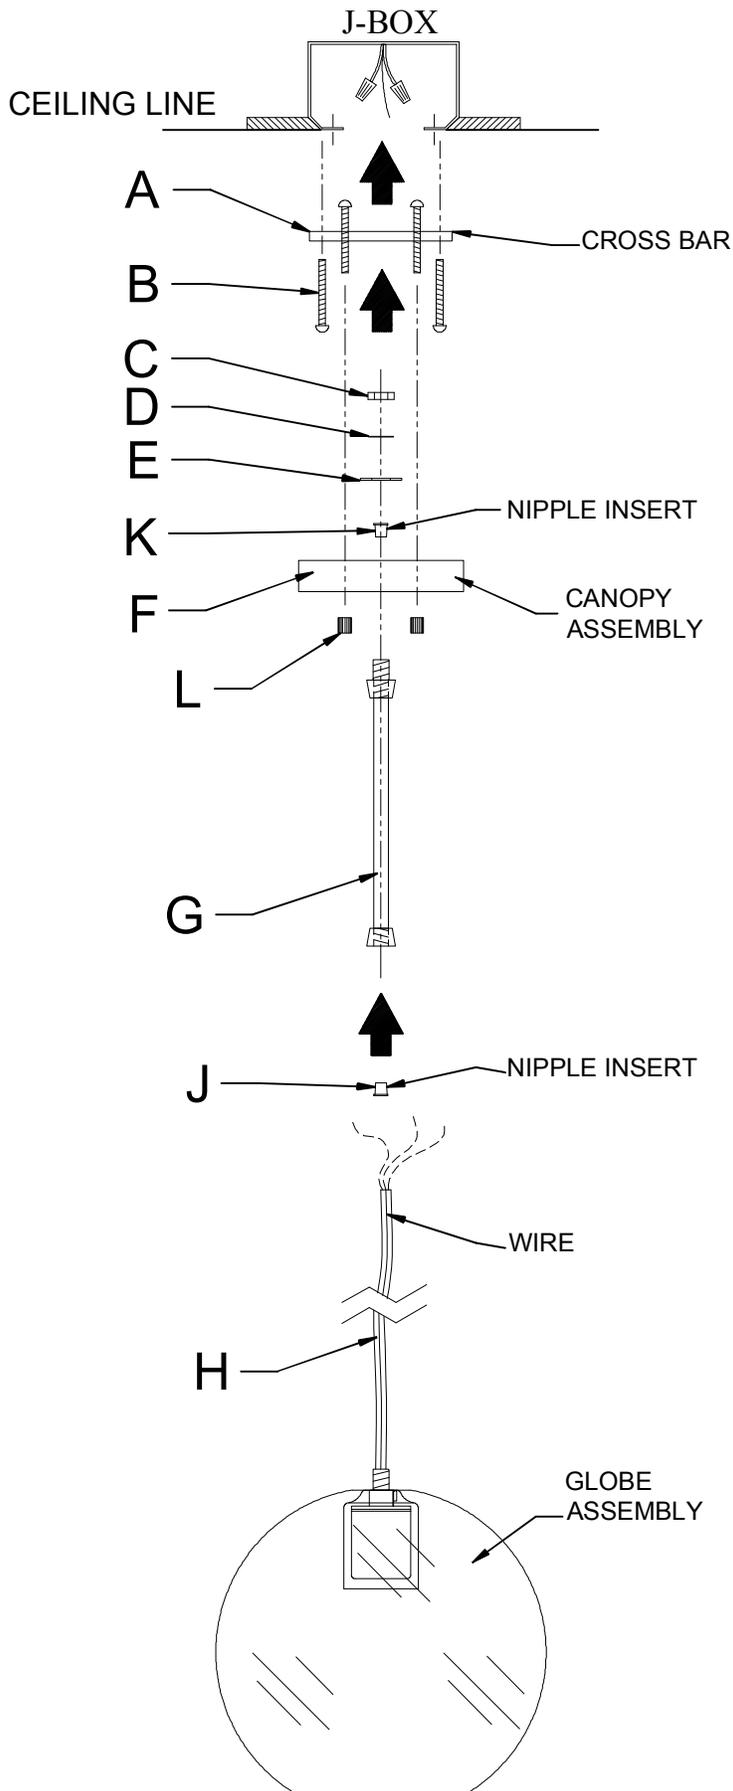

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1) ATTACH CROSS BAR (A) TO "J" BOX WITH FASTENERS (B) PROVIDED BY OTHERS.
- 2) REMOVE HEX NUT (C), SPIDER WASHER (D), AND FLAT WASHER (E) FROM TOP OF ROD.
- 3) ADJUST LENGTH OF ROD IF DESIRED.
- 4) PLACE CANOPY (F) OVER TOP OF NIPPLE AT TOP OF ROD (G), THEN SECURE WITH FLAT WASHER (E), SPIDER WASHER (D), AND HEX NUT (C).
- 5) THREAD WIRE (H) THROUGH CENTER OF NIPPLE INSERT (J) & UP THROUGH CENTER OF ROD (E) UNTIL NIPPLE INSERT IS FIRMLY NESTED INTO NIPPLE AT BOTTOM OF ROD (G).
- 6) SCREW NIPPLE AT TOP OF GLOBE ASSEMBLY INTO BOTTOM OF ROD (G).
- 7) THREAD WIRE (H) THROUGH NIPPLE INSERT (K) AND SLIDE DOWN UNTIL IT IS NESTED FIRMLY INTO THE NIPPLE AT THE TOP OF THE ROD (G).
- 8) WIRE AS PER LOCAL ELECTRICAL CODES.
- 9) PLACE FIXTURE ASSEMBLY TO CEILING AND SECURE IN PLACE WITH CANOPY NUTS (L).



CUSTOMER PROPOSAL / CUT SHEET

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00a.m - 6:00p.m ET

visit us on the web at www.meyda.com

WG 9/26/13