


# ASSEMBLY INSTRUCTIONS FOR #14809 (M36)

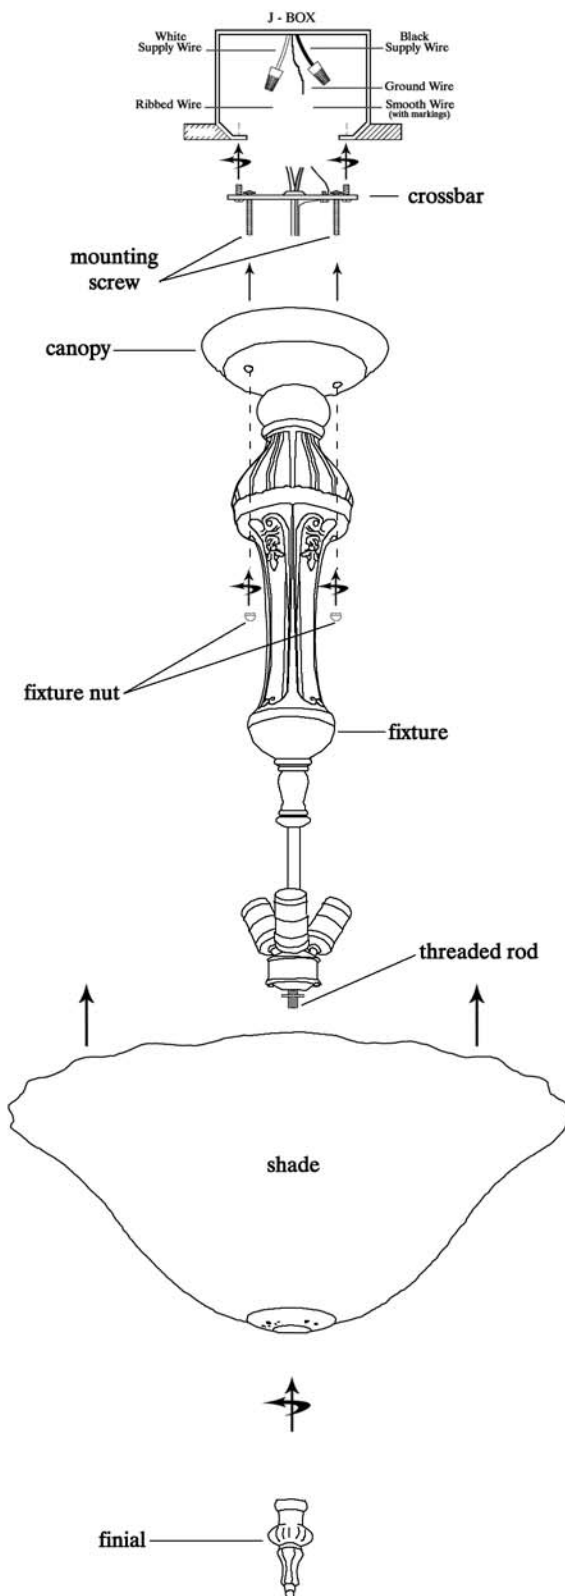

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Attach crossbar to j-box
2. Wire as per local electrical code.
3. Place fixture up and onto mounting screws. Attach fixture nut onto mounting screws and tighten to canopy.
4. Place light bulbs into sockets.
5. Place shade up and onto threaded rod, screw finial onto threaded rod and tighten to shade.



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)