

ASSEMBLY INSTRUCTIONS FOR #14815 (M37)

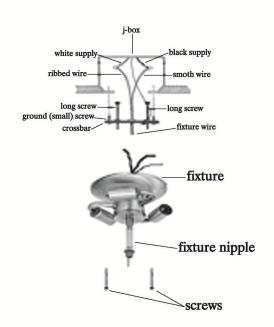

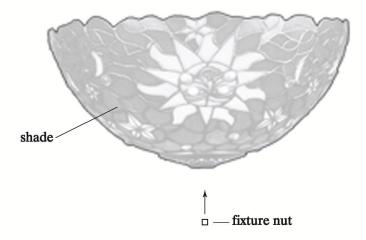

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1. Screw crossbvar into j-box.
- 2. Screw fixture to crossbar.
- 3. Wire as per local electrical code.
- 4. Place shade onto fixture nipple.
- 5. Screw fixture nut onto fixture nipple and tighten to shade.



"A Commitment to Excellence in Lighting and Service"