


ASSEMBLY INSTRUCTIONS FOR 18677 (M263)

IMPORTANT

TURN OFF THE POWER AT THE MAIN
FUSE OR CIRCUIT BREAKER BOX
BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL
PARTS BEFORE ASSEMBLY. BULBS ARE
NOT INCLUDED

1. Turn off power to J-Box.
2. Attach crossbar with threaded rod to J-Box.
3. Place canopy to J-Box onto threaded rod and attach with finial. Do not tighten canopy to ceiling with finial.
4. Wire as per local electrical code.
5. Tighten canopy to ceiling with finial.
6. Place shade onto fitter and secure with uno ring, place lightbulb inot socket.
7. Turn power on to J-Box.

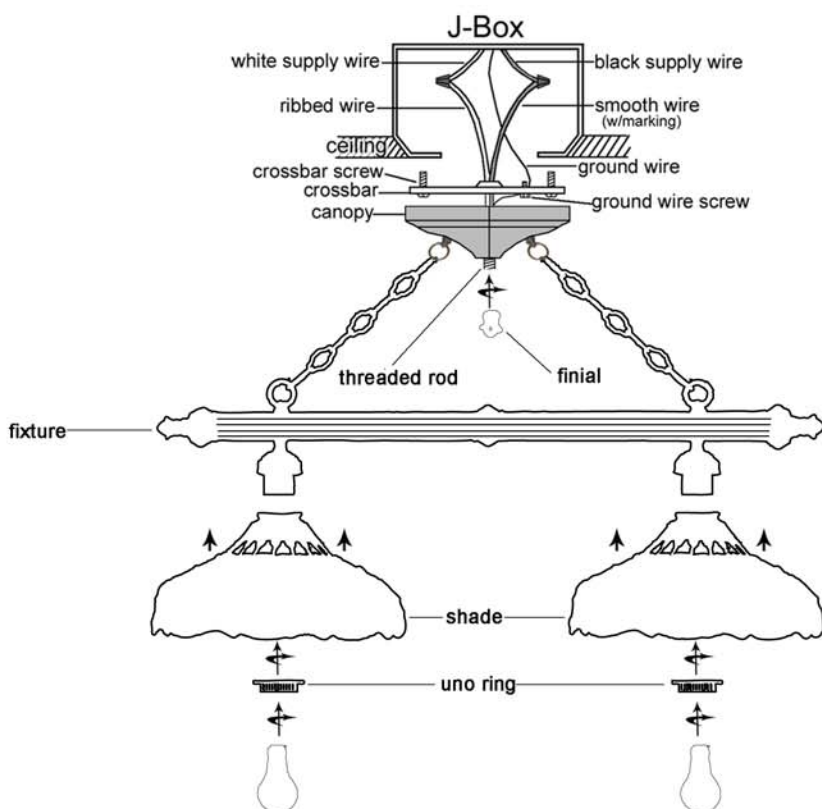

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com