


ASSEMBLY INSTRUCTIONS FOR #28501 (M54-TR546-12R-1)

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

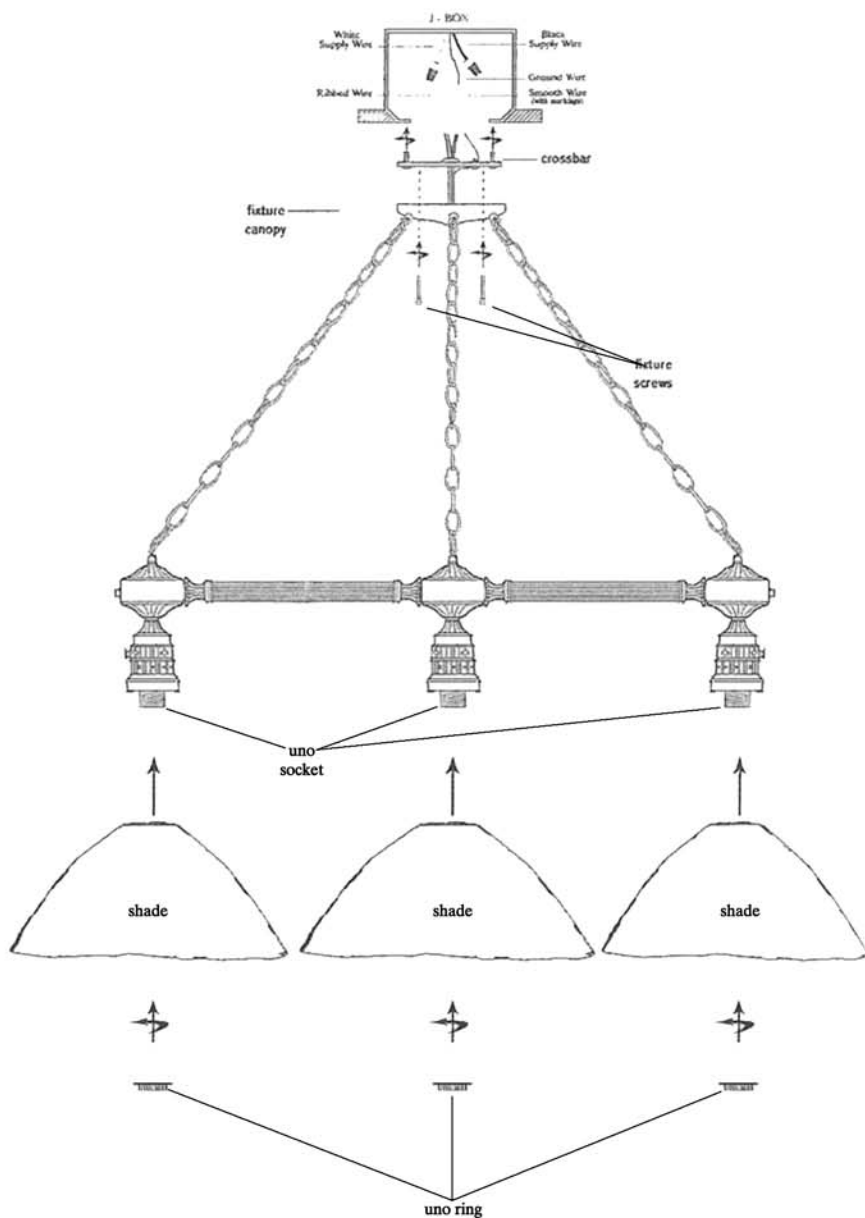

1. Attach crossbar to J-Box.
2. Wire as per local electrical code.
3. Screw fixture canopy to crossbars with fixture screws provided.
4. Place uno shade up and over uno socket, screw uno ring onto uno socket and tighten shade.
5. Repeat step #4 with remaining shades.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com