


# ASSEMBLY INSTRUCTIONS FOR #31101 (TR872-20-1-M36)

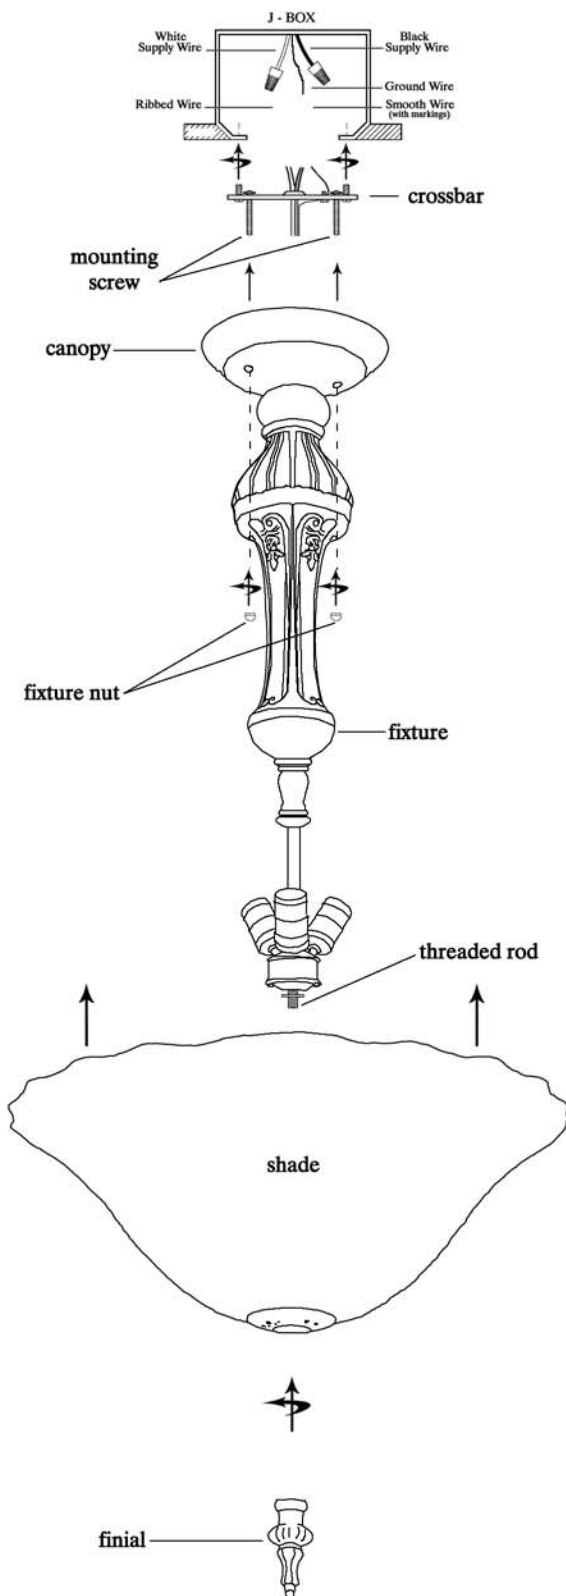

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Attach crossbar to j-box
2. Wire as per local electrical code.
3. Place fixture up and onto mounting screws. Attach fixture nut onto mounting screws and tighten to canopy.
4. Place light bulbs into sockets.
5. Place shade up and onto threaded rod, screw finial onto threaded rod and tighten to shade.




*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)

CUT SHEET, ITEM # 31101

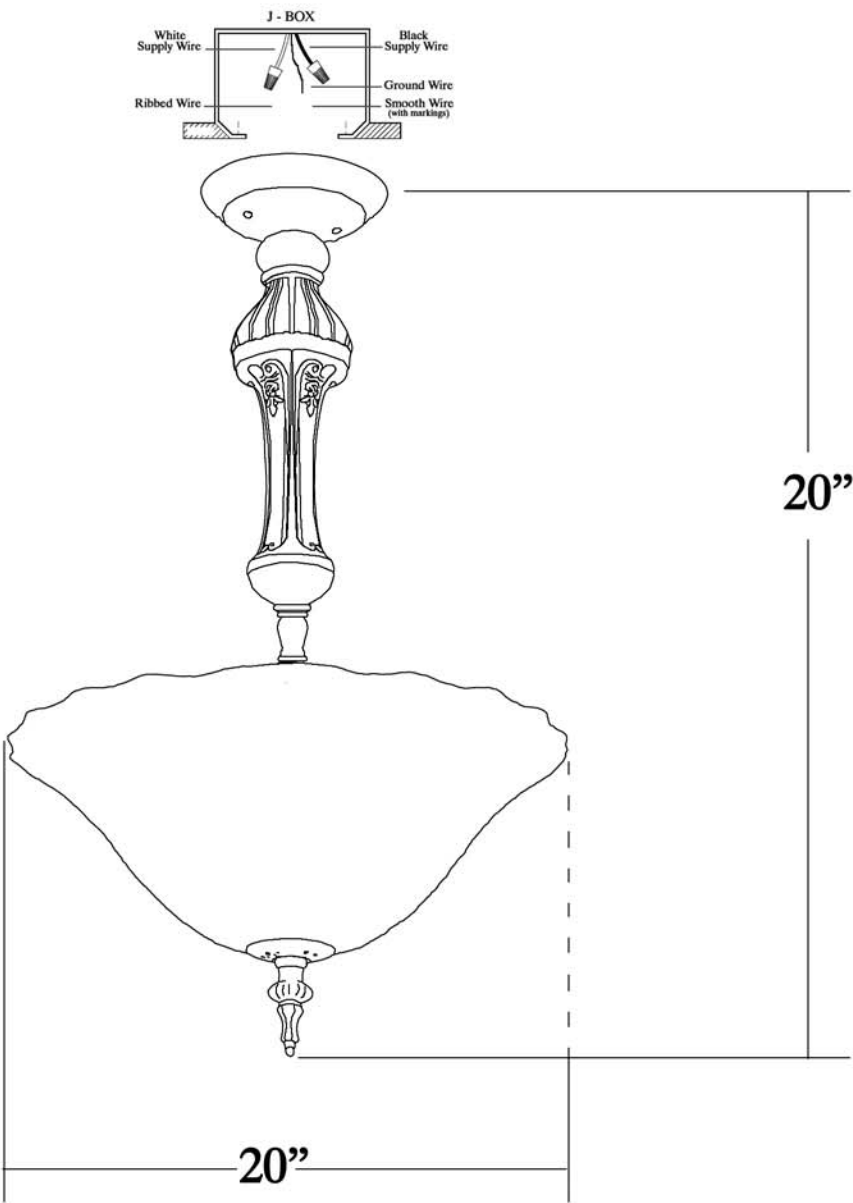

DRAWN BY 244	APRVD. BY	DATE 1-22-09	© MEYDA TIFFANY, INC. © DESIGN COPYRIGHT, MEYDA TIFFANY, INC. ALL RIGHTS RESERVED, NO UNAUTHORIZED DUPLICATION			
VOLTAGE 110	WEIGHT 15LBS		BULB # THREE	DISCRIPTION 20' PEACOCK SEMI-FLUSH	PROJECT NUMBER TR872-20-1-M36	
FINISH ANTIQUE MAHOGANY			TYPE MEDIUM BASE	FIXTURE TYPE SEMI-FLUSH PENDANT	DESIGN NUMBER	
MATERIAL GLASS/METAL			WATT 100		FINAL MODEL NUMBER 31101	