
ASSEMBLY INSTRUCTIONS FOR 31191 (SG546-16L-1 M52)

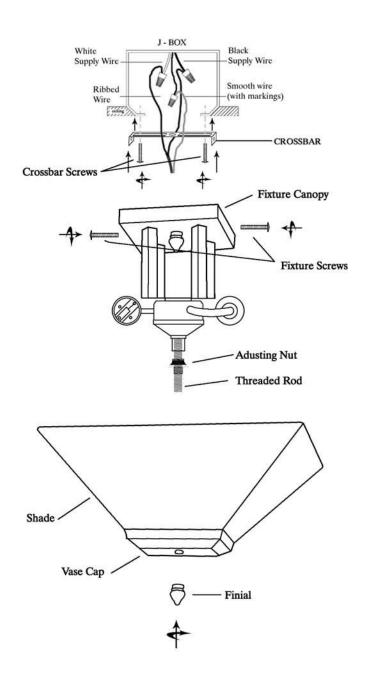

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1. Remove screws from fixture canopy and cross-bar.
- 2. Screw cross-bar to J-Box using crossbar screws.
- 3. Attach fixture wires to J-Box wires as shown. (wire as per local electrical code)
- 4. Place fixture screws through fixture canopy and screw into cross-bar. (Tighten canopy to ceiling.)
- 5. Place shade up and over fitter socket.
- 6. Screw finial onto threaded rod and tighten to shade.



"A Commitment to Excellence in Lighting and Service"

