
ASSEMBLY INSTRUCTIONS FOR #10338 (M20)

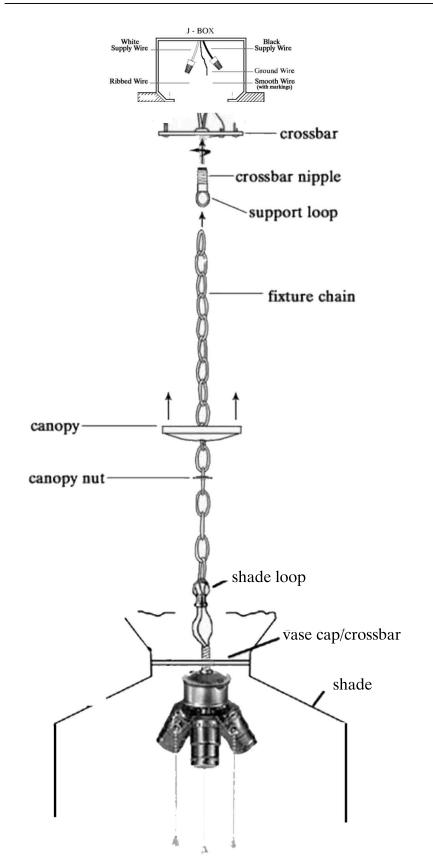

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1. Attach crossbar to outlet box using screws located in outlet box.
- 2. Install fixture wires and ground wire up through hole in shade vase cap/crossbar. Pull fixture wire with ground wire up until light fixture nipple seats into vase cap/crossbar. Place shade loop onto fixture wires with ground wire, slide down and screw onto light fixture nipple, tighten to vase cap/crossbar.
- 3. Screw crossbar nipple into crossbar,
- 4. Attach chain to shade loop. Place canopy nut than canopy onto chain, attach chain to crossbar nipple, Thread fixture wires with ground wire through chain and through crossbar nipple.
- 5. Wire as per local electrical code.
- 6. Slide canopy up to ceiling, screw canopy nut onto crossbar nipple and tighten to canopy.



"A Commitment to Excellence in Lighting and Service"

