


# ASSEMBLY INSTRUCTIONS FOR #48913 (M91)

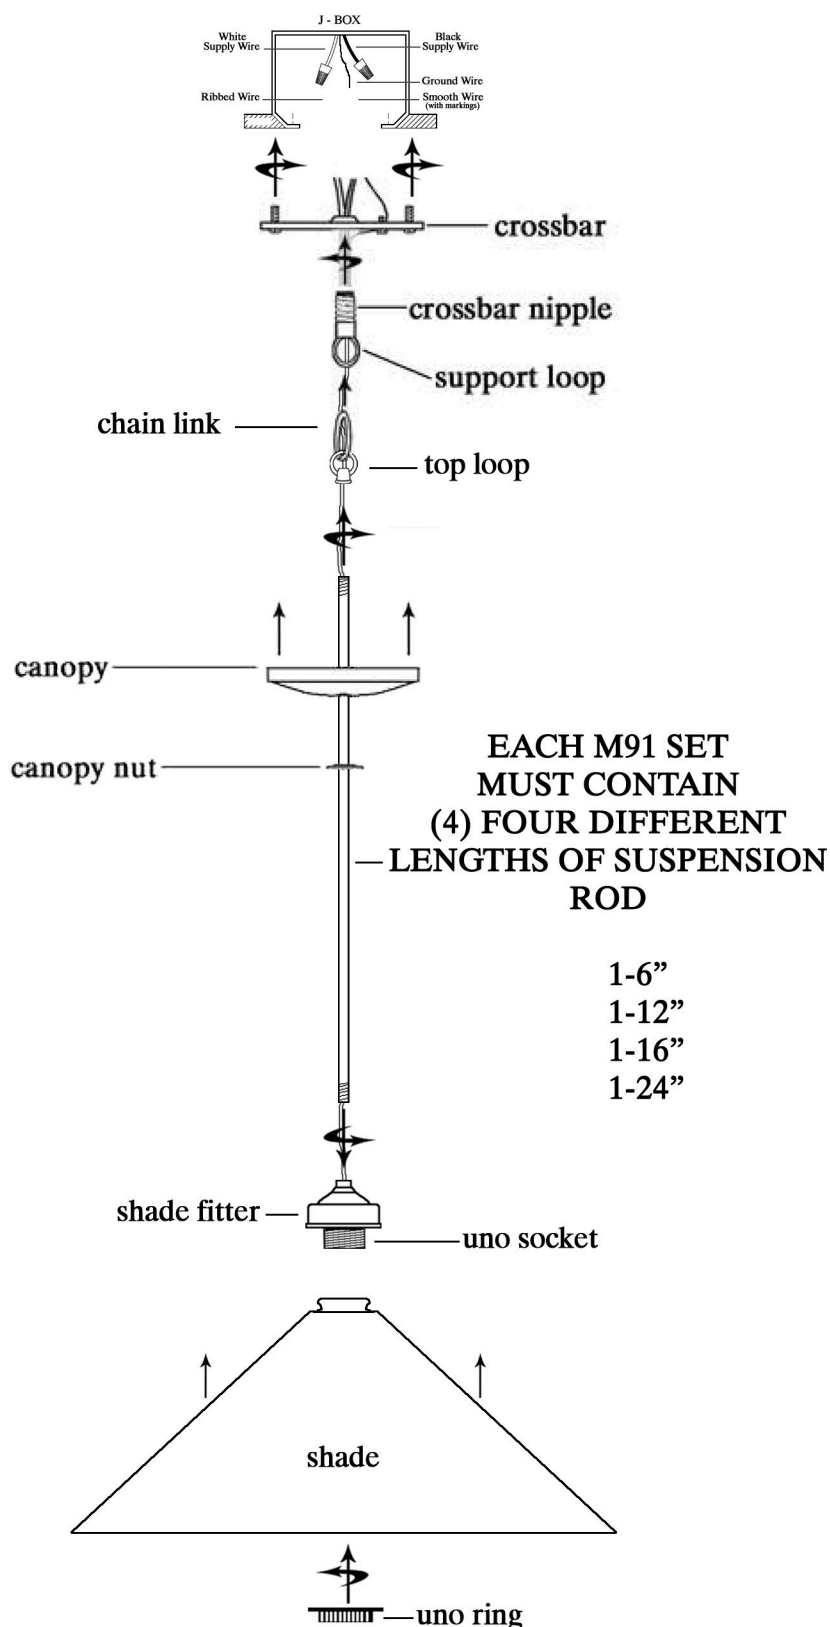

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Each M91 comes with 4 different length suspension rods. Choose the correct rod or combination of rods that will allow the fixture to hang at the desired overall height.
2. Place the fixture wire through the suspension rod(s), screw shade fitter into the suspension rod(s).
3. Place the canopy nut then canopy onto the suspension rod(s). Place the fixture wire through the top loop. Screw suspension rod(s) into the top loop.
4. Attach crossbar with crossbar nipple and support loop to j box.
5. Place fixture wire up through crossbar assembly, attach chain link to support loop and top loop.
6. Wire as per local electrical code.
7. Slide canopy up to ceiling and secure with canopy nut.
8. Place shade into shade fitter, screw uno ring onto uno socket.



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)